

Mounting Accessories

- Adapter Assemblies
- Withdrawal Sleeves
- Locknuts
- Lockwashers
- Lock plates

Adapter Assemblies and Applied Bearing Bore Numbers

Bearing		Adapter Assembly series					
		H30	H31	H2	H32	H3	H23
Self-aligning Ball Bearings	12 K			04~22			
	22 K					04~22	
	13 K					04~22	
	23 K						04~22
Spherical Roller Bearings	230 K	24~/500					
	231 K		22~/500				
	222 K		24~64			05~22	
	232 K				60~/500		18~56
	213 K					05~22	
	223 K						08~56
Ball Bearings for Bearing Units	UK2						05~18
	UKX						05~28
	UK3						05~20

Withdrawal Sleeves and Applied Bearing Bore Numbers

Bearing		Withdrawal Sleeve series						
		AH30	AH31	AH2	AH22	AH32	AH3	AH23
Self-aligning Ball Bearings	12 K			08~22				
	22 K		22					08~20
	13 K						08~22	
	23 K							08~22
Spherical Roller Bearings	230 K	24~/500						
	231 K		22~/500					
	222 K		22~34		36~64		08~20	
	232 K					18~40 60~/500		44~56
	213 K						08~22	
	223 K							08~56

Note: In case of spherical roller bearings without outer rib on inner ring, locknut may have a larger bore than the outside diameter of the inner ring. Please check the dimensions.

